
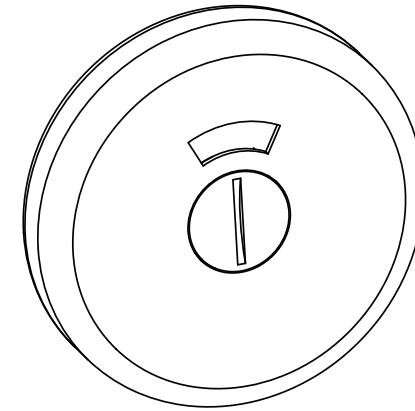


Privacy Turn Streaks Accessibility + Indicator

Install Instructions

YSG

Bankston

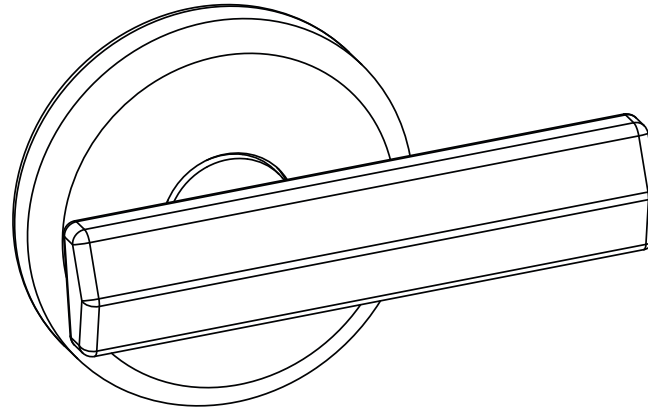

Drill
Template



Finishes &
Materials



FAQs &
Warranty



Resources

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**

ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only




Please recycle
me after use




COMP463

1. Mark the edge of your door at the desired height of your privacy turn from the centre of the spindle hole to the bottom of the door.
2. Remove the cap head bolt (J) allowing the privacy turn (A) to separate from the privacy turn rose inner (C).

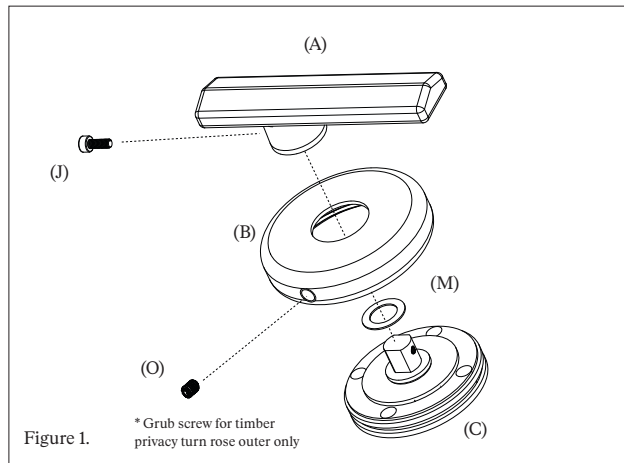

3. Loosen grub screw (K/O) from the emergency release rose outer with indicator window (D) to separate from emergency release rose inner with indicator (E).

Figure 2.

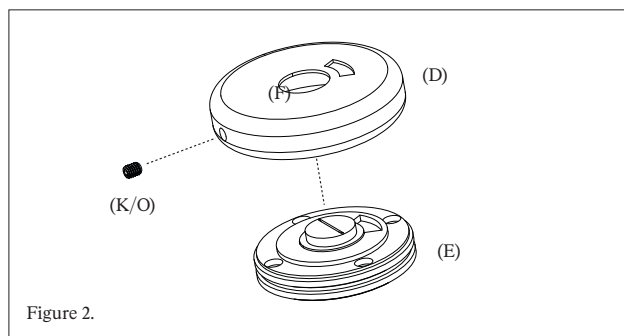


4. Install your privacy bolt (sold separately). Refer supplier instructions. *We recommend installing the privacy bolt first, then add the spindle flat (I) through the privacy bolt follower and place the rose inner (C & E) over the spindle to mark up all pilot holes.


*Template available online if required.




5. If using connector bolts (F), shorten to suit the door thickness ensuring they will not protrude from the opposite rose inner (C & E) once installed. Figure 3.

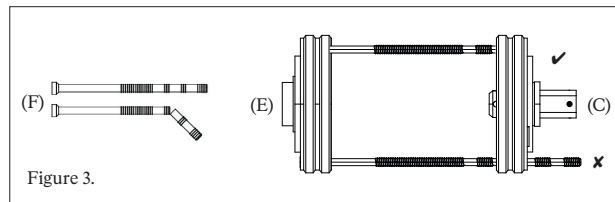


6. Drill the pilot holes (2mm for wood screws (G), or 5mm for connector bolts (F) from both sides of the door.
7. Drill the centre spindle hole using a 12.5mm or 1/2" bit from both sides of the door.
8. Adjust spindle flat (I) to suit your door thickness if required. Remove excess from the square end of the spindle. Figure 4.

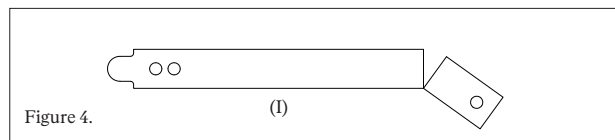


9. Insert the rounded end of the spindle flat (I) into the privacy turn rose inner (C) and secure it with the split pin (H). Figure 5.

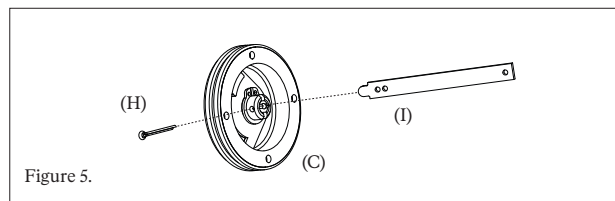

10. From the inside of the room place the privacy turn rose inner (C) against the door and push the spindle flat (I) through the privacy bolt follower. Make sure the screw hole in the neck of the privacy turn rose inner (C) is facing the edge of the door. Figure 6.


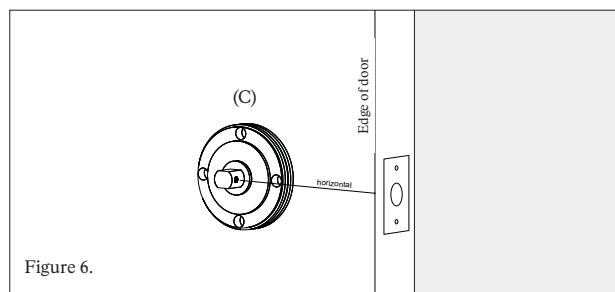


11. From the outside of the door place the emergency release rose inner with indicator (E) over the spindle flat (I) with the indicator showing full green. Figure 7.

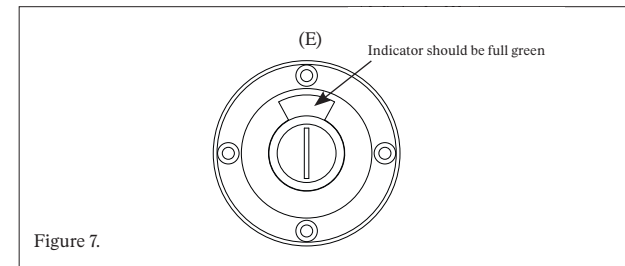


Note: The Privacy Bolt should not be engaged


12. Screw the connector bolts (F) from outside the door through the emergency release rose inner with indicator (E) and into the privacy turn rose inner (C) on the other side of the door until tight. Figure 8. Or, If using wood screws (G) secure both inner roses (C & E) at all fixing points. Figure 9.

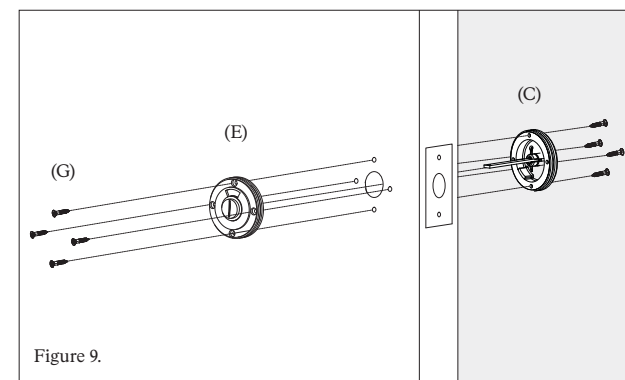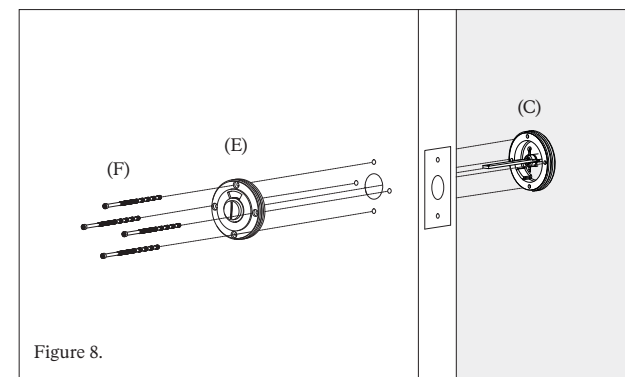


13. From the outside of the door place the emergency release rose outer with indicator window (D) over the emergency release rose inner with indicator (E) aligning the indicator window and securing with the grub screw (K or O) using Allen key (L or N) from below. Figure 10.

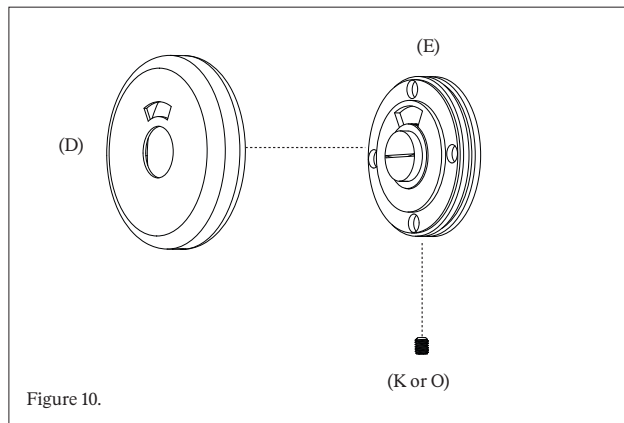

14. From the inside of the door screw the privacy turn rose outer (B) over the Privacy turn rose inner (C) until it is flush with the door. For timber roses, attach with grub screw (O) from below.
15. Place the nylon washer (M) over the neck of the privacy turn rose inner (C). Figure 11.

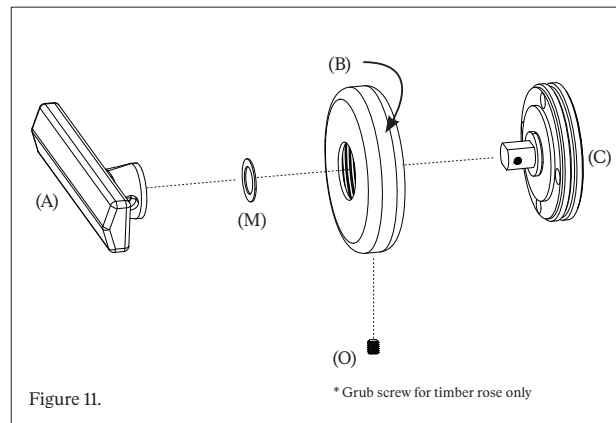


16. Attach the privacy turn (A) horizontally over the neck of the privacy turn rose inner (C) and fix with the cap head bolt (J) from the side. Figure 12.

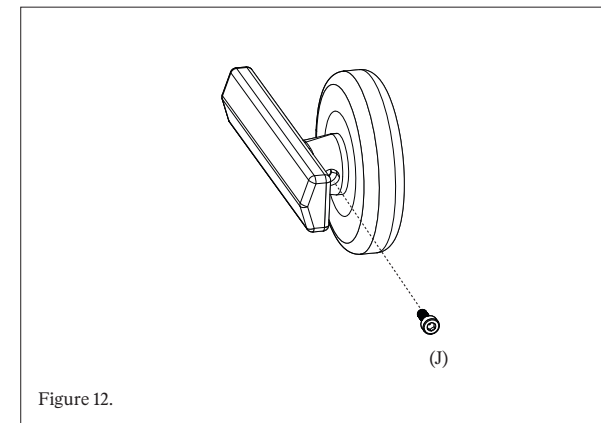

Included

- (A) Privacy turn x 1
- (B) Privacy turn rose outer x 1
- (C) Privacy turn rose inner x 1
- (D) Emergency release rose outer with indicator window x 1
- (E) Emergency release rose inner with indicator x 1
- (F) Connector bolts L65mm x 4
- (G) Wood screws L25mm x 9
- (H) Split pin x 1
- (I) Spindle flat L63mm x 1
- (J) Cap head bolt L8mm x 2
- (K) Grub screw L5mm M5 x 2 (for patinated bronze emergency release rose outer)
- (L) Allen Key 2.5mm x 1 (for (J) and patinated bronze emergency release rose outer)
- (M) Nylon washer x 2
- (N) Allen Key 2mm x 1 (for timber rose outer)
- (O) Grub screw L5mm M4 x 3 (for timber rose outer)

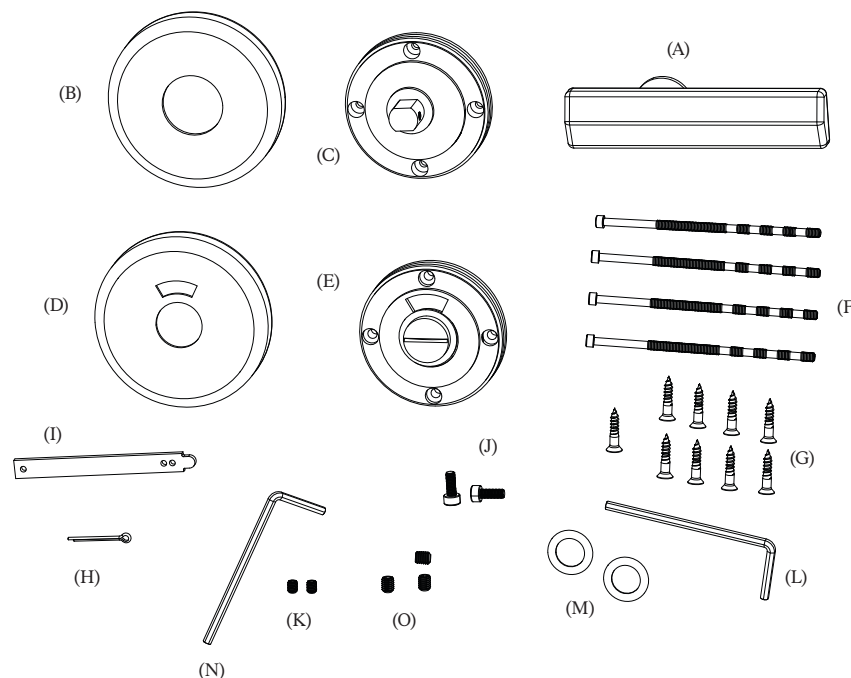

PLEASE NOTE:

Please note that screws require pre-drilling.
Please take extra care when fitting.

IMPORTANT:

Please install this hardware in the following order to ensure its warranty is not voided.

1. Install the hardware on raw/unfinished door using the instructions provided.
2. Remove hardware (where possible) and store safely. Do not place tape onto the hardware as this will damage the finish.
3. Paint / finish door.
4. Reinstall hardware.