


Edge Pull

L6 9/32 x W 1 3/32" | L160 x W28mm

Install Instructions

YSG

Bankston

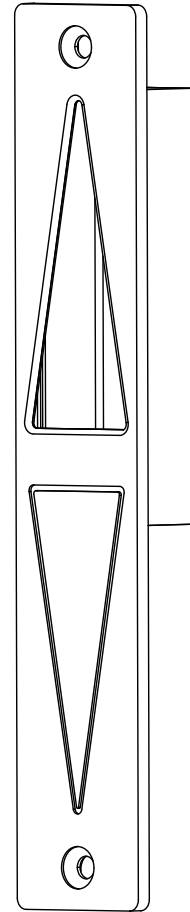

Drill
Template



Finishes &
Materials



FAQs &
Warranty



Resources

bankston.com

@bankston_architectural



Bankston Australia
14-16 Stepney Street
Stepney, South Australia 5069

P. +61 (0)8 8362 1133
E. info@bankstonarchitectural.com.au

Bankston New Zealand
P. +64 (0)6 359 0008
E. info@bankstonarchitectural.co.nz

Bankston International
E. info@bankston.com

**SDG Trading Pty Ltd trading
as Bankston Architectural**

ACN 008 154 041
ABN 18 008 154 041

*Image used for illustration
purposes only




Please recycle
me after use



COMP498

1. Mark a line at your desired horizontal height for the centre of the edge pull.
2. Mark a vertical line along the centre of your door thickness.

Figure 1.

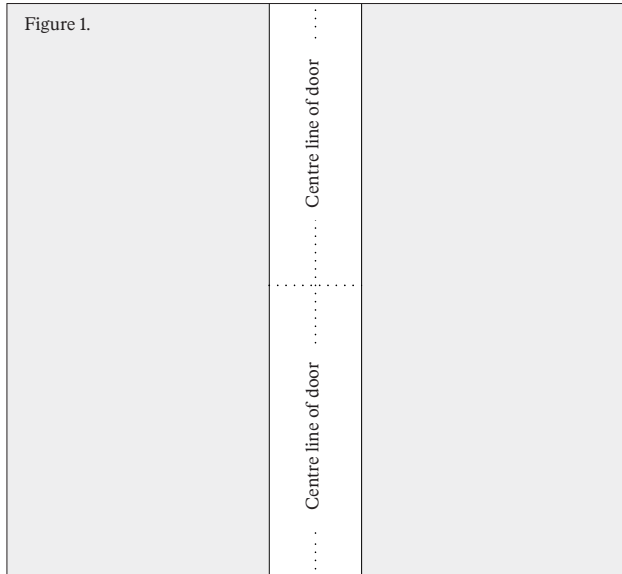


*Template available online if required.




3. Drill the two pilot holes CTC 145mm or 5 ¹¹/₁₆" with your preferred bit.
4. Using a sharp knife mark around the outside of the faceplate and using your preferred, method remove material to a depth of 3mm or ¹/₈".
5. From the top of the face plate mark a line 14mm or ⁹/₁₆" down and a further 79mm or 3 ¹/₈" down. Using your preferred method remove this remaining material to a further depth of 18mm or 1 ¹/₁₆" for the dust box cavity.
6. Place the dust box (B) into the created cavity.
7. Position the face plate (A) over the top with the triangular finger hole at the top.
8. The edge pull should now sit flush with the door, if not repeat steps 4 to 6.
9. Secure to the door using the wood screws (C) provided. Figure 2.

Figure 2.

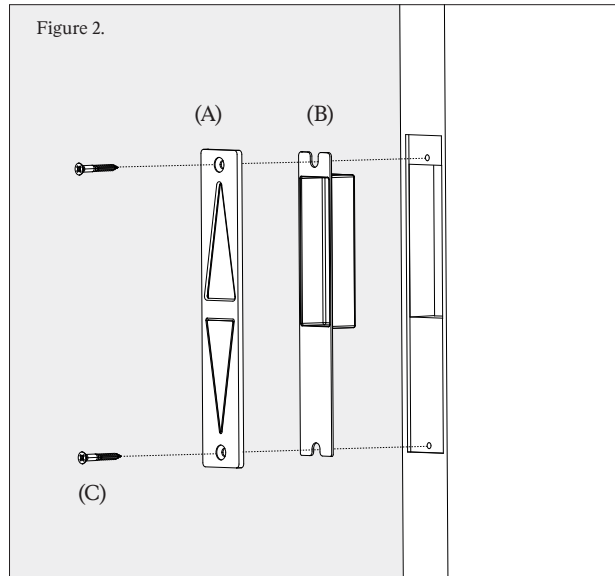


Included

- (A) Edge pull face plate x 1
- (B) Dust box x 1
- (C) Wood screws x 3

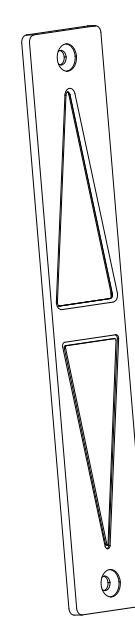

(A)

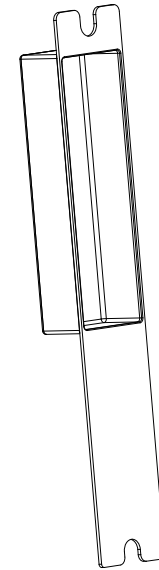

(B)



(C)